

Side Channels - Installation Instructions

Please follow these Installation Instructions

You will need a pencil, tape measure, drill, screwdriver.

Note: Shade must be installed before you start side channel installation

Step 1. ADJUSTING THE SIDE CHANNEL FOR INSTALLATION


Place the side channel into the window frame, window molding or wall area to be mounted. Mark locations inside the channel for drilling.

Note: If trimming the side channel is necessary for a proper fit, it can easily be done with a metal hacksaw blade. Make sure to mark the side channel with the straight line before cutting.

Note: Top view shown.

Step 2. INSTALL SIDE CHANNELS


Lineup center of the side channel with the fabric.

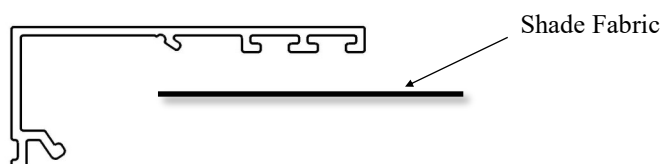

Attach the mounting channel with screws.


Note: Top view shown.

INSIDE MOUNT INSTALLATION

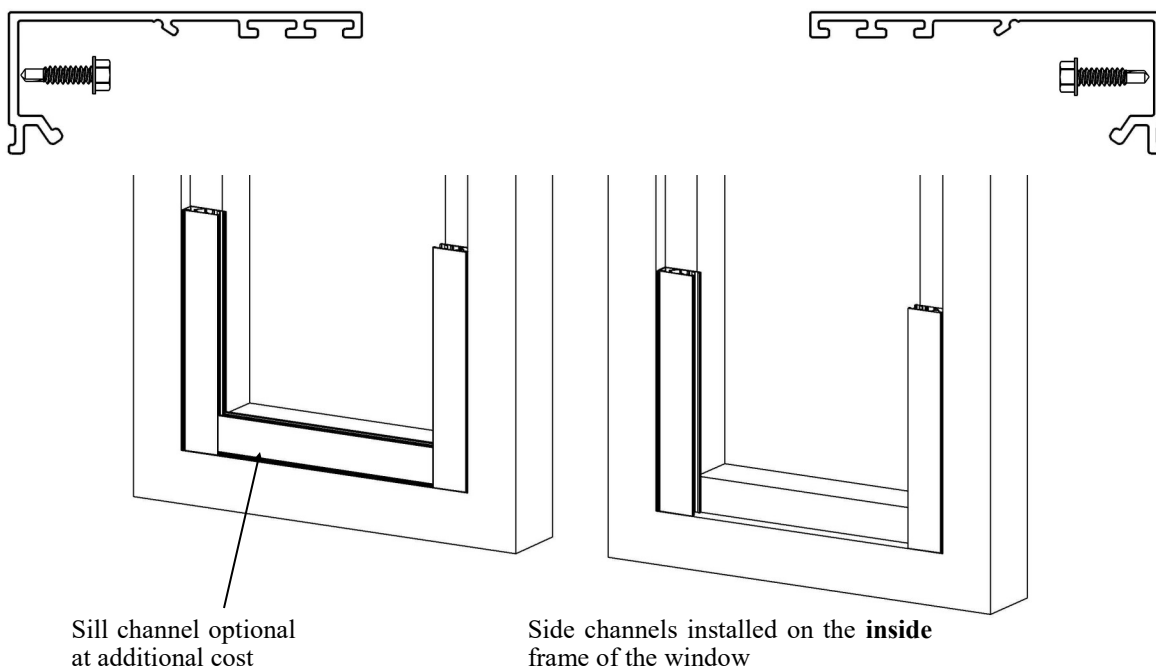

Side Channels - Installation Instructions

OUTSIDE MOUNT INSTALLATION

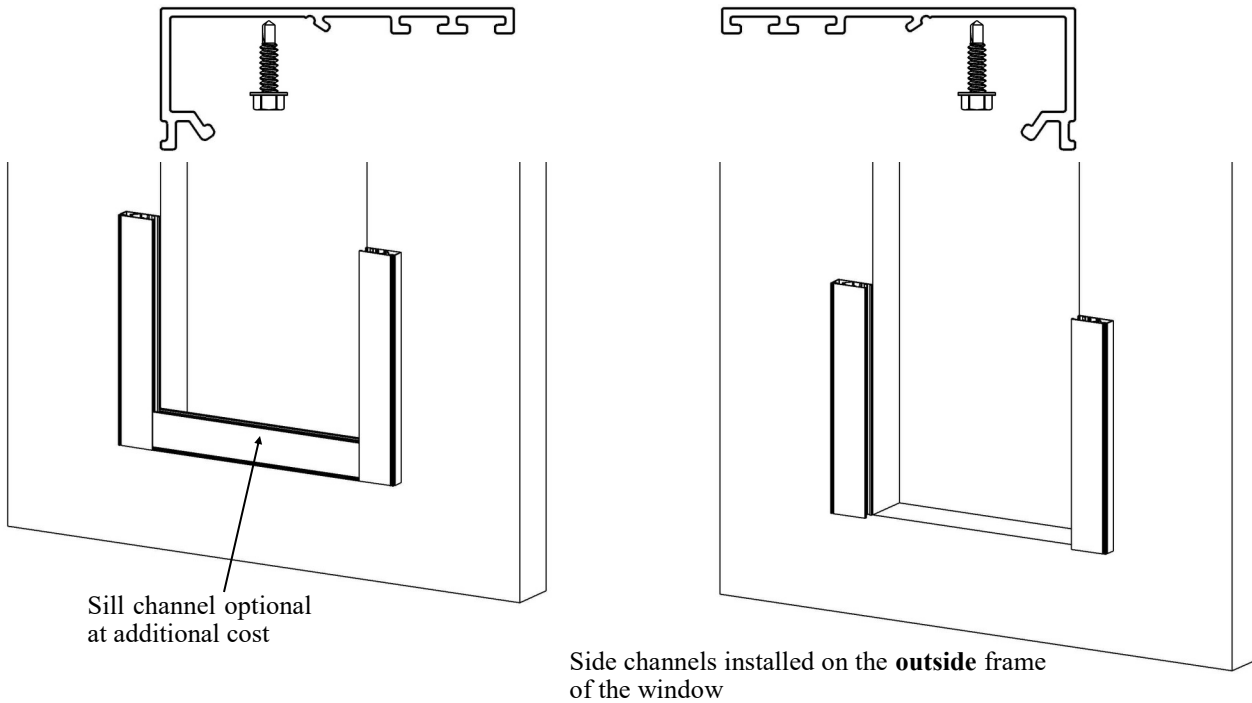

Step 3. ATTACH FRONT CHANNELS

Place the front channel into the mounting arm and rotate it until it snaps together.

Note: Top view shown.

