
Simple Touch® Motorized Aluminum Blind



<u>Identify your aluminum blind and parts</u> (your parts may vary, depending on the custom request, size of the headrail & blind you are purchasing.)

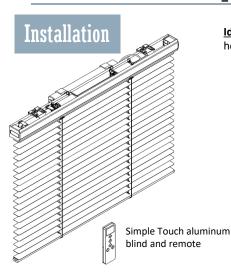

Brackets & screws

blind width	Qty of brackets
W ≤ 39.5"	2
39.5" < W ≤ 67"	3
67" < W ≤ 96"	4
96" < W < 120"	5



Rechargeable battery pack (*The default quantity of the charger and USB cord is 1 set per order. You can request more sets at no cost up to the same quantity as the rechargeable battery pack you ordered.)







Spacers (optional)

Tools you may need (not included)












Drill with bits


Metal tape measure

Install the brackets


- Mark the bracket locations. Space the brackets evenly and make sure the brackets will not interfere with any mechanism or other internal headrail parts.
- Install the brackets using screws (included) and tighten them completely.
- Make sure all brackets are aligned and level with each other.

- Install the blind with extension brackets (optional)
 - o Install the extension bracket with at least 2 screws.
 - Attach the hidden brackets to the extension brackets with the screws.



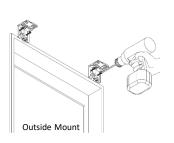


Pen

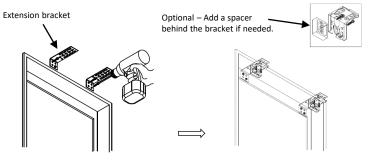

Install the rechargeable battery pack

- The rechargeable battery pack can either be hooked behind the headrail or mounted to the wall or window frame.
- Refer to the Simple Touch rechargeable battery pack user guide to install the battery pack.




The minimum flush mounting space is 3-1/2" \sim 4".




Attach the blind

- Position the headrail with the front lip resting on the top hooks of all the brackets.
- Push the bottom of headrail firmly upward and toward the window until the groove at the bottom of the headrail snaps into place.

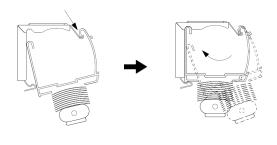


How to remove the blind from the brackets


- Press the **UP** button to raise the blind completely.
- Use a flat screw to push the bracket tab toward to the wall. Once you hear a "click", then the blind will be released from the bracket.
- · Repeat above step to release the blind from other brackets.

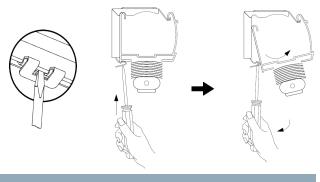

Programming Guide for the Simple Touch Aluminum Blind

No programming needed. We have programmed your blind. The programming steps below are optional.

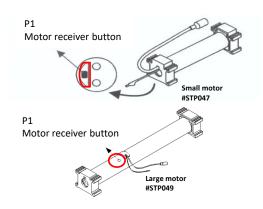

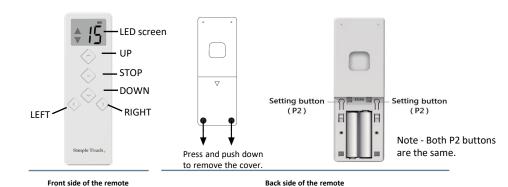

- The default group control is on channel #0.
- Option to set up "MY FAVORITE POSITION" if you prefer, simply follow the instructions below. Once you have set it up, you will be able to quickly access your preferred position with just the press of the STOP button.
- Recharge the rechargeable battery pack doesn't affect the setting of the blinds.

Optional Programming Instructions

PROGRAMMING FOR MY FAVORITE POSITION		
Set Up My Favorite	Step 1. Click the LEFT or Right buttons to select the channel you wish to program.	
Position	Step 2. Raise the blind all the way up by clicking the UP button. Skip this step if the blind is already at the top position.	
	Step 3. Adjust the bottom rail to your favorite height by clicking the DOWN or UP buttons, and then hit the STOP button.	
	Step 4. Click either one of the P2 buttons. The blind jogs once.	
	Step 5. Click the STOP button once. The blind jogs once.	
	Step 6. Click the STOP button again. The blind jogs twice.	
	My favorite position set up is done.	
Remove My Favorite Position	Step 1. Click either one of the P2 buttons. The blind jogs once.	
Position	Step 2. Click the STOP button once. The blind jogs once.	
	Step 3. Click the STOP button again. The blind jogs once.	
	Remove My Favorite Position is done.	

ADJUST THE TOP LIMIT



Step 1. Click the **LEFT** or **Right** buttons to select the channel you wish to program.

Step 1. Press the **STOP** and **UP** buttons for about 5 seconds until the blind jogs once.

Step 2. Use the remote to control the blind to the desired upper position and then hit the STOP button.

Step 3. Press the **STOP** and **UP** buttons for about 2-3 seconds until the blind jogs twice.

JOG x 2

Adjust the top limit is done.

ADJUST THE BOTTOM LIMIT to fit your window height



Step 1. Press the **STOP** and **DOWN** buttons for about 5 seconds until the blind jogs once.

JOG x 1

Step 2. Use the remote to control the bottom rail to fit your window height and then hit the STOP button.

Step 3. Press the STOP and DOWN buttons for about 2-3 seconds until the blind jogs twice.

JOG x 2

Adjust the bottom limit is done.

ADD/ REMOVE A DUPLICATED REMOTE CONTROL



Step 1. Select the channel you wish to copy by clicking the LEFT or RIGHT buttons on both EXISTING and NEW remotes.

Step 2. Click one of the **P2** buttons once on the existing remote. The blind jogs once.

JOG x 1

Step 3. Click the same **P2** button again. The blind jog once.

JOG x 1

Step 4. Click one of the **P2** buttons on the new remote. The blind jogs twice.

JOG x 2

REMOVE Process the step 1 to 4 above to remove the remote.

LOCK/ UNLOCK 3 FRONT BUTTONS to prevent resetting the top and bottom limits

LOCK



Step 1. Press and hold the **STOP** button until "L" shown on the screen (about 15-20 seconds).

Step 2. Click P2 button once, then the "half 0" symbol will be shown on the screen. The lock setup is done.


UNLOCK



Step 1. Press and hold the **STOP** button until "U" shown on the screen (about 15-20 seconds).

Step 2. Click **P2** button once, then the "half 0" symbol will be shown on the screen. **The unlock setup** is done.

ADJUST THE MOTOR SPEED (Three speeds are available. The slowest speed is the default setting)



Step 1. Click one of the P2 buttons once. The blind jogs once.

JOG x 1

Step 2. Click the **UP** button. The blind jogs once.

Step 3. Click the **UP** button again. The blind jogs twice.

Step 1. Click one of the **P2** buttons once. The blind jogs once.

Step 3. Click the **DOWN** button again. The blind jogs twice.

Step 2. Click the **DOWN** button. The blind jogs once.

JOG x 1

JOG x 2

REVERSE THE MOTOR DIRECTION




Step 1. Press the P1 button on the blind you wish to program until the blind jogs 3 times (about 10 seconds). The location of the P1 button can be found on page 1.



NOTE. The P1 button is on the side of the small motor or on the top of the larger motor. Refer to page 1 for the P1 locations.

Warning: In the rare instance that you may have to do a "FACTORY RESET", follow the sequence and steps below. Complete to program "PAIR THE REMOTE TO THE BLIND", "SET UP THE TOP LIMIT", "SET UP THE BOTTOM LIMIT", and "SET UP THE MOTOR TO JOG MODE" before operating the motorized blind again.

FACTORY RESET




Step 1. Press the P1 button on the motor you wish to reset until the blind jogs 4 times (about 15 seconds).

IOG v 4

Note. DO NOT RELEASE the **P1** button during this step. If accidently release it, please must redo it again. Different numbers of jogs will result in different settings.

PAIR THE REMOTE TO THE blind



Step 1. Press the P1 button on the same blind about 2-3 seconds. The blind jogs once.

JOG x 1

Step 2. Select the channel on the remote.

Step 3. Press the **STOP** button on the remote for about 2-3 seconds. The blind jogs twice. Make sure you stay at the same channel.

JOG x 2

SET UP THE TOP LIMIT

TOP Limit




Step 1. Press the **UP** button to move the blind up, then hit the **STOP** button when it reaches the top.

Step 2. Press both **UP** and **STOP** buttons for about 2-3 seconds. The blind jogs twice.

JOG x 2

SET UP THE BOTTOM LIMIT

Bottom Limit





NOTE: The setup will not succeed when the **STOP** button is pressed after the bottom rail passes through the bottom and then travels up. If it accidently happened, start it again by pressing the **UP** button to raise the blind and repeat **Step 1.**

Step 2. Press both **DOWN** and **STOP** buttons for about 2-3 seconds. The blind jogs twice.

JOG x 2

SET UP THE MOTOR TO JOG MODE (The jog mode allows you to tilt the slats by clicking the UP or DOWN button.)

Jog mode



Step 1. Press both **UP** and **DOWN** buttons for about 5 seconds. The blind jogs once.

JOG x 1

Step 2. Click the **STOP** button. The blind jogs once.

JOG x 1

Note. The default mode of the motor is the continuous mode. Switch to jog mode will allows you to tile the slats by clicking the UP or DOWN button.

Continuous Mode


Repeat step 1 and step 2 above to switch the motor back to continuous mode.


Care and Clean

Wipe the blind periodically with a soft dust cloth or dusting mitt, or vacuum with a lowest speed.

Notes

- Do not spill water to the headrail and the wand.
- Do not clean or operate the motorized blind with wet hands
- The warranty of your blinds does not cover damage caused by improper cleaning.
- · The motorized blind is for indoor use only.
- Do not use the motorized blinds at the wet area.







FOR INDOOR USE ONLY

This motorized blind has been tested and found to complete with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This blind generates, uses and can radiate radio-frequency energy. If this blind is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this blind does cause harmful interference to radio or television reception, which can be determined by turning the blind off and on, correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase separation between blind and receiver

Connect equipment to an outlet on a circuit different from that to which the receiver is located.

Consult your dealer or an experienced radio/TV technician

Any changes or modifications to the product that are not expressly approved by HT could void the user's authority to operate this blind. Use of a shielded interface cable is required to comply with the Class B limits of Part 15 of FCC rules. For more regulatory information, see the electronic user guide. HT shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.