

Colors vary from lot to lot and may not exactly match sample swatch or previous purchases. Discontinued items or color selections will be replaced with the closest equivalent current product.

YOUR RIGHTS UNDER STATE LAW:

This lifetime limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you.

No agent, representative, dealer, or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions.

Performance Window Shadings

INSTALLATION INSTRUCTIONS

Step 1. Check Package Contents. Missing part? Call 800-264-1190

Mounting hardware kit includes the following:

Part	Quantity
Mounting Brackets	3 (for shades 24" to 60" wide) 4 (for shades 60" to 90" wide) 5 (for shades over 90" wide)
1¼" Screws	2 per bracket & cord guide
Wall Anchors for Cord Guide	2

Step 2. Tools required

Pencil, tape measure, level, screw driver, pliers, step stool, drill.



Step 3. Installation


Your blind may be installed either inside the window frame or outside the window frame.

Wallboard or Plaster: use wall anchors (not included).

Concrete, Stone, Brick: use a masonry drill bit and anchors or screws specifically designed for masonry (not included).

Inside Mounting:

One bracket should be positioned about

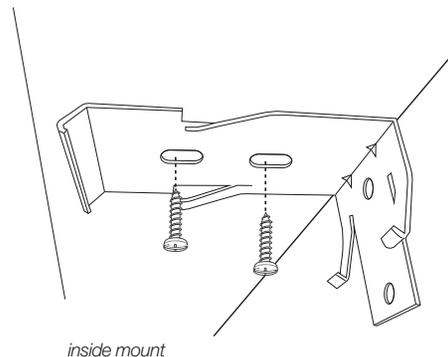

2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets.


Attach each bracket to the inner top of the window opening using the screws provided. Pre-drill the screw holes using a 5/64" drill bit.

For flush inside mounts, attach the brackets to the head rail first (see drawings and attachment instructions below), and then position the shade in the window opening as desired. Then make pencil marks at the back of each bracket. Align the brackets with the pencil marks, and then screw them in place as described above.

Outside Mounting:

Attach the Brackets to the wall or window framing. One bracket should be positioned about 2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets. Pre-drill the screw holes using a 5/64" drill bit.


The brackets must be level – use a Spirit Level if necessary to assure proper alignment.

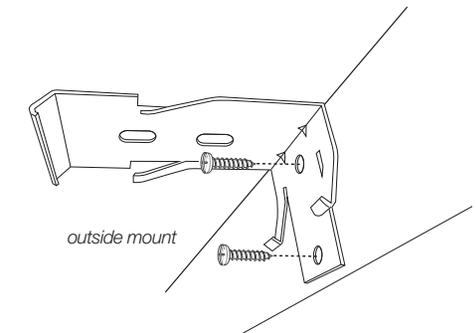

Step 4. Securing the Head Rail


Position the head rail so that the ridge on the top-front of the head rail fits into the front of the bracket as illustrated, and then push upward until the metal tabs on the

⚠ WARNING	⚠ ADVERTENCIA
<p>Window Blind Cord Can STRANGLE Your Child</p> <ul style="list-style-type: none"> • Children can climb furniture to reach cords. • Move crib and furniture away. • Keep all cords out of children's reach. • Attach tension device to wall or floor. • Fasteners provided with tension device may not be appropriate for all amounting surfaces. • Use appropriate anchors for the mounting surface conditions. 	<p>La cuerda ciega del a ventana puede ESTRANGULAR su niño</p> <ul style="list-style-type: none"> • Los niños pueden subir los muebles para alcanzar las cuerdas. • Mueva la cuna y los muebles. • mantenga todas las cuerdas fuera del alcance de los niños. • Conecte el dispositivo de tensión a la pared o suelo. • Los sujetadores provistos con el dispositivo de tensión pueden no ser apropiados para todas las superficies de montaje. • Utilice anclajes apropiados para las condiciones de la superficie de montaje.

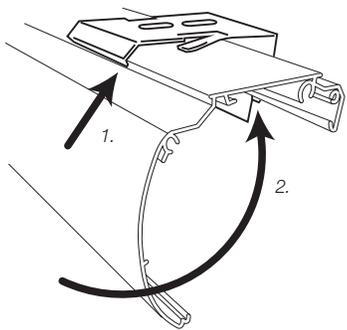

back of the bracket snap onto the back of the head rail.

Step 5. Install the Chain Tension Device. The tension device must be installed to make sure the shade is fully operable. Before doing anything, you must first slide the tension device to the bottom of the bead chain.

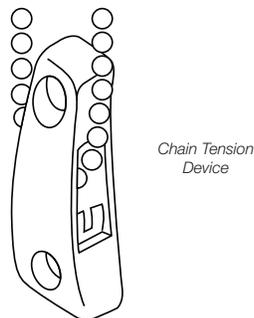


While holding the tension device in one hand, pull the plunger away from the bead chain with the other hand. Lift the bead chain out of the bead locking groove and slide the tension device to the bottom of the chain loop.


Pull the tension device down until the bead chain is fully tensioned (plunger will be at the top) and then move the tension device up approximately 1/8". Mark the screw hole locations on the wall with a pencil.

Inside Mount: if mounting into wood, pre-drill screw holes and then install the tension device using the 1/4" Phillips head screws provided.

If not securing into wood, use appropriate anchors for the substrate and follow anchor manufacturer's instructions.

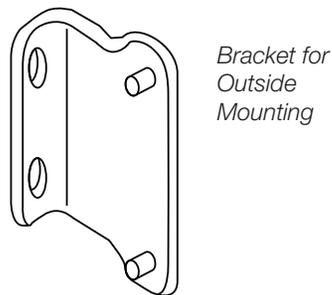

Bracket for Outside Mounting

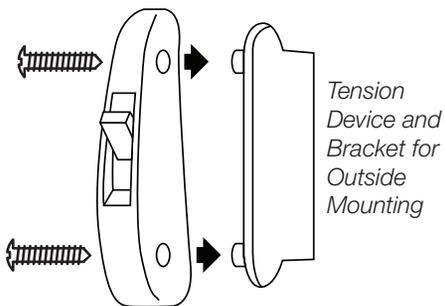

Tension Device and Bracket for Outside Mounting

Outside Mount: Align the mounting bracket screw holes with the pencil marks. If mounting into wood, pre-drill screw holes and then install the mounting bracket using the 1/4" Phillips head screws provided.

If not securing into wood, use appropriate anchors for the substrate and follow manufacturer's instructions.

Press the tension device onto the mounting bracket posts. Carefully attach the Tension Device to the bracket using the 3/8" Phillips head screws provided. **DO NOT OVERTIGHTEN.**

Step 6. How to Operate

To raise or lower the shade and tilt the fabric vanes, pull the lift cord. The front cord of the cord loop closes the fabric vanes and lifts the shade. The rear cord lowers the shade and opens the fabric vanes. Always pull the cords slowly and evenly to maintain the optimal performance of your shade.

Cleaning

To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush or upholstery attachment. For spot cleaning, use warm (not hot!) water with a mild soap to damp clean.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may call: 1-800-264-1190

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed

LIMITED LIFETIME WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

Covered:

Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function)

3 years: Cords including internal cords such as those found in cordless blinds. **5 years:** All fabric

Not Covered:

Normal Wear and Tear

Any product that fails due to: abuse • exposure to salt air • improper installation • accident • extraordinary use • improper operation • alterations • improper cleaning • misapplication • damage from pests/insects/pets • improper handling • misuse.

Natural wood products that have: loss of color intensity • yellowing or cracking of plastic parts or foam wood product • variations in color, grain, or texture • warping of wood slats in high humidity areas.

Costs associated with: product removal • transportation to and from the retailer • brand label removal • product re-measure • incidental or consequential damages • product reinstallation • shipping.

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced.

To Report Shipping Damage:

If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.

To Obtain Service:

If you suspect this product has a manufacturing defect in materials or workmanship:

1. Locate the sales receipt
2. Call place of purchase

Any unauthorized returns will not be accepted.

Warranty Remedy:

THIS SHALL BE YOUR SOLE REMEDY UNDER THIS LIMITED WARRANTY.

If this product is found to have a manufacturing defect in materials or workmanship, we will (at our discretion) do one of the following

- repair the product
- replace the product
- refund the cost of the product